

NOTES

- 1) An outside service main breaker/disconnect is required by WEC and readily accessible outside structure served.
- 2) Installation must follow current National Electric Code (NEC)
- 3) A County Inspection Card for the generator, transfer switch and disconnect must be on file with Warren Electric Cooperative.

Warren Electric Cooperative Youngsville, PA 800-364-8640 DWG No.: WEC-GEN-STAND

Effective Date: 11/1/2025

Block diagram for connecting an automatic whole-house generator to WEC supplied service